

NIX labs

NIX4F User's Guide



Contents


- 1. Introduction2
- 1.1 Precautions2
- 2. Key Features.....2
- 3. Model and Version Identification2
- 4. Powering Up.....3
- 4.1 Other Power Sources3
- 5. Reading the Display.....4
- 5.1.1 Time Display.....4
- 5.1.2 Date Display.....4
- 5.1.3 Temperature Display5
- 6. Using the Built-In Buttons.....6
- 6.1 Setting the Time.....6
- 6.2 Using the Counter/Timer6
- 6.3 Parameters Settings Menu7
- 7. Online Configuration Application (Web App)8
- 7.1 Using the Web App9
- 7.2 Time, Date and Display Options..... 11
- 7.3 LEDs and Display Brightness Options..... 12
- 7.4 Anti-Poisoning Options 13
- 7.5 On-Off Timer 14
- 8. Maximising Tube Life 15
- 9. Troubleshooting..... 16
- 10. Firmware Upgrade 18
- 11. Cleaning and Maintenance 19
- 12. Tube Replacement 19
- 13. Wall Mounting 20
- 14. Warranty and Repairs 21
- 14.1 Australian Consumer Law 21
- 14.2 Warranty and Liability Disclaimer..... 21
- 15. Specifications 22
- 15.1 Dimensions 23

1. Introduction

Thanks for your NIX labs purchase! Our products are highly customisable yet easy to use straight out of the box, so please refer to the Quick Start Guide included in the box or downloaded from nixlabs.com.au/support for the fastest setup experience. This manual will guide you through our more advanced features, product specifications and device troubleshooting.

The NIX labs NIX4F is based on Soviet-made IN12 display tubes, known as nixie tubes, which give a characteristic orange glow with wire-formed digits unlike any other display technology. The tubes display their digits by means of gas ionisation when a high voltage is applied to their terminals.

1.1 Precautions

	<p>This product uses glass tubes and contains high voltage circuitry – it is not a toy and must be handled with care. Do not expose to moisture or dew. Refer to operating and storage temperature limits in this manual. If bringing into a warm environment from the cold, allow condensation to clear before powering up. Do not insert objects into the gaps in the enclosure – risk of electric shock! If a potential hazard arises (eg: damage to the case or tubes that exposes circuitry), unplug from mains power immediately and contact NIX labs for support. Read this manual carefully before use.</p>
---	---

2. Key Features

- Bright, low-flicker nixie display tubes with adjustable brightness
- Compatible with desktop or wall-mounted use
- High-accuracy calibrated clock with temperature compensation
- 5+ Day Supercapacitor time and date backup, settings are saved permanently
- Time, Date and Temperature displays with auto-cycling option
- Count-up and count-down timer
- Customisable RGB base lighting LEDs with seven presets and random colour mode
- Night-time display and LED dimming with adjustable level and threshold
- Selectable button beep, 12/24-hour time format, °C/°F temperature display and optional leading zero
- USB Powered with web-based configuration application – no software download needed and compatible with Windows, Mac, Linux, ChromeOS and Android. Many options are configurable using built-in buttons.
- Each day can have up to two configurable on/off times to maximise tube life and reduce power consumption.

3. Model and Version Identification

The NIX Labs front-view nixie clock range currently consists of the four-tube NIX4F. However the functions and features of the NIX4F are identical to the upright-style NIX4 and NIX6 models. The device’s product and version information can be found when using the web app by selecting the gear icon in the upper right and selecting Diagnostics from the menu. The underside of each circuit board is also marked with the product’s model (eg: NIX4F), major hardware revision (eg: Rev A) and serial number (eg: 23080).

4. Powering Up

Check the box for the following items and remove them from their packaging:

- NIX4F nixie clock (with the optional angled feet installed)
- Australian power adaptor (or Multi-Region adaptor for international orders)
- Quick-start guide

If your order included the wall-mounting kit, then you should have also received the following accessories:

- Right-angle USB-C adapter
- 2x philips-head screws
- 2x plasterboard wall anchors
- 2x masonry wall anchors
- 4x rubber feet



For international orders supplied with the multi-region power adaptor, remove the AU plug from the power adaptor, and replace with the correct one for your region (US, EU or UK).

Plug the power adaptor's connector into your clock through the hole in the back, plug the adaptor into a wall outlet and turn on, your clock will turn on within 3 seconds and then show a display test for about 20 seconds, after which it is ready to use.

If you want to sit your clock flat on a desk, simply pull out the pre-installed angled feet from their sockets. Alternatively, you can hang your NIX4F on a wall - refer to the [Wall Mounting](#) section.

4.1 Other Power Sources

Your NIX labs device is powered by a standard USB-C connector, just like many mobile phones, cameras and other computer accessories. This means it can be powered from a number of sources such as computers, power banks and common USB chargers. The supplied voltage is important in ensuring maximum display brightness and should be as close to 5.0 to 5.1V as possible, which can be difficult when using low quality USB cables and chargers. The power supply included features a robust construction, high output capability and all the required regulatory safety approvals. For this reason, only operation with the supplied adaptor is recommended and warranted.

If using a power adaptor other than the NIX labs recommended unit, ensure it has a 5.0-5.1V output rated for at least 1.0A. Ensure any substitute power adaptor carries the compliance markings for your country, for example, the Australian RCM () and/or safety approvals such as the UL mark (). Do not use generic adaptors from eBay or similar, as poor quality units can be a fire and shock hazard, and could damage you or your nixie clock.

When powering from a computer, connect directly to the computer's USB port – avoid unpowered hubs or extension cables. You can use any good-quality charge & data USB-C to regular USB-A or USB-C to USB-C cable to connect your nixie clock to your computer or phone/tablet.

The display brightness will adjust automatically according to the power output of the adaptor (or PC) used. If the display seems dim, despite being set to full brightness, or in the case of a flickering display, ensure the supplied adaptor is used. It is also possible to read the voltage using the web app's diagnostics screen – the acceptable range is 4.7V to 5.3V.

5. Reading the Display

Each tube has its own RGB LED for under-lighting, which can be set to show a different colour based on the current “screen” (Time, Date or Temperature). As a Soviet-era cost-cutting measure, these IN12 tubes feature an upside-down ‘2’ used as the ‘5’ digit. The following section describes how to read the display in each of the Time, Date and Temperature modes. The NIX4F model uses four nixie tubes with a dual-level neon bulb colon separator. Examples of the different display modes are shown on the following pages. The tubes will get only slightly warm in operation, and although they are somewhat fragile, it is safe to touch them.

5.1.1 Time Display

The NIX4F shows time in an HH:MM format, which can be in 12 or 24-hour with or without a leading zero for hours less than 10. In this time screen, the colon separator can be set as solid on, solid off, fast flashing (0.5Hz) or slow flashing (1Hz). In the example below, the time is 12:56.



5.1.2 Date Display

The NIX4F can show the date in a DD.MM or MM.DD format. In this date screen, the lower colon separator is lit to distinguish between the day and month. In the example below, the format has been set to DD.MM and so it is the 20th of April (20/04).



5.1.3 Temperature Display

The NIX4F shows temperature in a XX.X format in either °C or °F, with a displayed range of 0.0°C to 65.5°C (or equivalent in °F). In this temperature screen, the display is left-aligned and the lower colon separator is shown as a decimal point. In the example below, the temperature is 22.0°C.



6. Using the Built-In Buttons

Many parameters can be set using the three built-in buttons, so connection to the Web App for configuration is not required. When on the time screen, briefly pressing the ▲ button displays the date, and then temperature for a few seconds. If the date is not set (which can be done using the Web App) then only the temperature will be shown.

On any screen, briefly pressing the ▼ button cycles through the LED colour options for that screen. Using the Web App allows individual setting of the time, date and temperature screen LED colours – if they are set individually, then pressing the button only changes the colour for the current screen. If the colours are not set individually, or if LEDs-Cycling or LEDs-Off is selected, then the button setting applies to all screens. The built-in LED colour order is:

Red	Green	Blue	Cyan	Magenta	Yellow	White	Custom	Cycling	Off
-----	-------	------	------	---------	--------	-------	--------	---------	-----

6.1 Setting the Time

Press the SET button briefly and the display will be changed to only show the hour digits. Press the ▲ and ▼ buttons to set the hour (always 24hr format) and SET to advance to the minutes to do the same. After adjusting the minutes, pressing SET again will save the new time and return to the normal time screen. When the new time is saved, the seconds are set to zero. If the setting menu is entered into but the hour and minute values were not changed, then there will be no change to the time (including seconds). If in the time setting mode and no button has been pressed for 30 seconds, the display will revert back to the normal time screen without saving.

6.2 Using the Counter/Timer

When your clock is showing the time, hold ▲ for 3 seconds to start an up-counter. To start a countdown timer, hold the ▼ button on the time screen, and the display will change to showing just the timer hours. Press the ▲ and ▼ buttons to set the hours, then press SET to advance to the minutes, and then SET again to start the timer. The maximum counter/timer value is 99 hours and 59 minutes. If the up-counter reaches 99:59, it will be cancelled automatically.

When a timer is running, the ▲ and ▼ buttons are disabled, briefly pressing SET will pause/resume, and holding SET for 3 seconds will cancel the timer. Every minute the current time will be shown for about 3 seconds. If you set a counter/timer, the display will stay on even if an on-off timer is set (USB sleep is not affected). A timer/counter will continue running through sleep, however unplugging your clock will cancel it.

6.3 Parameters Settings Menu

Hold the SET button for 3 seconds and the display will enter the parameters settings menu, which allows adjustment of the brightness, LED colour, 12/24hr time and other settings. The leftmost digit shows the setting number, and the rightmost digits show the current value – use the ▲ and ▼ buttons to adjust. Press the SET button briefly to advance to the next setting, and at the end of the settings list it will save all changes and return back to the normal time screen. If no button has been pressed for 30 seconds, the display will revert back to the normal time screen, saving any settings that were changed. The ordering and description of these options are shown below.

Setting Number	Description	Usage
1	Set day-time tube brightness	Use ▲ and ▼ to set tube brightness from 0 (min) to 7 (max).
2	Set night-time tube brightness	
3	Set night-time light threshold	Press ▲ to use the current ambient light level as the night-time detection threshold. Press ▼ to use existing threshold. “1” = New night-time threshold will be set “0” = No change to threshold level
4	Set custom LED colour	Cycle through LED colours by holding ▲ or ▼ and release on the desired colour. To show the custom colour on the normal time screen, exit the menu and use ▼ to cycle through presets until new colour is selected. Note: no value is shown on right side of display.
5	Set LED brightness	Use ▲ and ▼ to set LED brightness, applied to all screens. Low brightness may affect the custom colour appearance. Note: no value is shown on right side of display.
6	Select 12hr or 24hr time format	Use ▲ and ▼ to choose time format. “12” = 12-hour “24” = 24-hour
7	Select °C or °F temperature	Use ▲ and ▼ to choose temperature units. “1” = °F (Degrees Fahrenheit) “0” = °C (Degrees Celsius)

7. Online Configuration Application (Web App)

A key feature of your NIX labs clocks is ease of use, and as such, it is not necessary to connect your device to the PC for operation, and many options can be set, if desired, using the three built-in buttons. The web-based configuration application (“web app”) uses the WebUSB feature on Chromium-based browsers, such as Google Chrome or Microsoft Edge, on Windows, Mac, Linux and Android, and does not require any additional software or drivers to be installed.

To access the web app, simply connect the clock to your PC/Mac or Android device, open Chrome or Edge, and visit app.nixie.com.au, then click “Connect” and select your device from the popup list.

Below is a comparison of all the options that can be set using the buttons or web app.

	Buttons	Web App
Set time	✓	✓
Set date		✓
Start a counter/timer	✓	
12/24hr time format	✓	✓
Leading zero on time display		✓
Button beep		✓
Colon on/off/flash		✓
Auto-show date and temperature		✓
Mainly show date/temperature and not time		✓
Date format (DD/MM/YY or MM/DD/YY)		✓
Select °C / °F temperature units	✓	✓
Customise LED colour	✓	✓
Randomised LED colour		✓
Rainbow cycling LED colour	✓	✓
Adjust rainbow colour cycling speed		✓
Different LED colour for time, date and temperature		✓
Day and night display brightness	✓	✓
Set LED brightness	✓	✓
Set LED dimming level at night		✓
Set ambient-light night dimming threshold	✓	✓
Select ambient-light or time-based night dimming		✓
Enable dynamic display/LED brightness		✓
Enable tube anti-poisoning		✓
On-off timer		✓
Options for behaviour after a power loss		✓
Read diagnostic information		✓
Download event logs		✓
Firmware upgrade		✓

7.1 Using the Web App

You can use any good-quality charge & data USB cable to connect your nixie clock to your computer or phone/tablet. The interface uses drivers already built into modern operating systems (Windows, Mac, Linux and Android) and the WebUSB feature of Chromium version 61 and newer – no additional software is required.

When your nixie clock is connected, use Google Chrome, Microsoft Edge or Opera Browser to visit app.nixie.com.au and click on the Connect button at the top right of the page. A dialog will appear listing all of the compatible NIX labs devices found - choose your device and click connect. Upon connection, all of the device's settings are loaded from the clock to the Web App. The Web App is arranged with tiles to group similar features, and the settings in each tile can be saved to your clock by mousing over the tile and clicking the send button that appears at the top right. If you adjust a setting using the device's buttons whilst you are connected to the Web App, the page must be refreshed in order to update the controls on the settings tiles.

The 'More Options' gear icon at the top right contains a menu with options for saving/restoring your settings to/from a file, firmware update (see Firmware Upgrade), system diagnostics as well as a 'help' and 'about' popup. If there is a firmware update available for your clock, it will be shown in the 'firmware info msg.' text in the welcome tile. The diagnostics option can be useful if you need to contact support for any trouble, and it also gives the option of doing a factory reset.

An overview of the Web App showing major buttons and features is included in the screen capture on the next page.

More Options

Connection Status

Connect Button

DISCONNECT USB

Welcome

Plug in your clock and click CONNECT USB, then choose your device from the popup list. By clicking the connect button, you agree to the NIX labs [privacy policy](#) and [terms of service](#).

Your device has the latest firmware, enjoy!

Firmware Info Msg.

Time, Date and Display Options

Here you can set the date and time, as well as general options including the display format, night-time dimming mode and whether to show the date and/or temperature automatically.

- Use current time and date
- 12 hour time 24 hour time
- DD/MM/YY MM/DD/YY
- Celsius Fahrenheit
- Show leading zero
- Beep on button press Loud Quiet

Colon mode
Static on

Display mode
Show time only

Night-time Detection
Based on ambient light MEASURE CURRENT LEVEL

◀ Darker Night threshold level Brighter ▶

- Autoscale display brightness during day
- Autoscale LED brightness during day

Tile Apply Button

Settings Controls

Settings Tiles

LEDs and Display Brightness

Choose from seven LED colour presets, cycling colours, or create a custom colour. The night-time dimming levels for the display and LEDs can also be adjusted.

Set custom colour (5sec preview when clicked)

R

G

B

RGB LED colour cycling
Medium (2min/cycle) Enable cycling

Time screen LEDs
Cyan

Date screen LEDs
Cyan

Temperature screen LEDs
Cyan

LED dimming at night
LEDs 15%

Day-time display brightness

Night-time display brightness

Anti-Poison and LED Changer

Anti-poisoning helps to reduce uneven wear on Nixie tube elements, and there are four patterns and time intervals to choose from. The LEDs can be set to change to a new colour at the chosen time interval independent of the anti-poisoning setting.

Use tube anti-poisoning

Anti-poisoning and LED change time
Runs every hour, on the hour

LED colour after anti-poisoning
LED colour does not change

On/Off Timer

To prolong display life and reduce power consumption, up to two on/off times can be set per day. For example, you could set the Monday to Friday off time to be 9AM after leaving for work and the on time to be 4PM for when you arrive home.

Turn off when PC sleeps

Turn on when PC starts

Behaviour after power loss
Always on

SUN MON TUES WED THURS FRI SAT

Timer A enable

On-time A Off-time A

Timer B enable

On-time B Off-time B

COPY TO ALL

7.2 Time, Date and Display Options

Item	Setting Name	Description
①	Time and date	When the slider is 'on' (as shown below) then the current PC time and date will be applied when the tile settings apply button is clicked. If the slider is set to off, a manual time and date entry box will appear.
②	Time format	Select 12hr (default) or 24hr time display format.
③	Date format	Select DD.MM (default) or MM.DD date format.
④	Temperature units	Select °C (default) or °F temperature units.
⑤	Show leading zero	Enable or disable (default) time screen leading zero. Eg: 8:35 becomes 08:35
⑥	Button beep	Enable or disable (default) beep on button press, with two loudness settings.
⑦	Colon mode	For the colon between the hours, minutes and seconds, choose between colon off, solid on (default), fast (0.5Hz) flash or slow (1Hz) flash. Only applies to time screen.
⑧	Display mode	Choose to show just the time screen, or automatically display the date and/or temperature every 30 seconds, 1 minute, or 5 minutes (duration ~3 sec). You can also choose to show only date or temperature, or change between date/temp every 30s, 1min or 5min. For these modes where time is not the main screen, briefly pressing the ▲ button shows the time for about 3 sec.
⑨	Night detection mode	Choose to have night mode dimming either based on the ambient light level (default) or based on a time window. When "Based on a timer" is selected, a night start and end time box appears and accepts times to the nearest 15 minutes. When "Based on ambient light" is selected (as shown below), then a slider appears which allows you to set the threshold point. The black marker ▼ shows the current ambient light level, and is updated when the "measure current level" button is clicked. Night mode is entered when the ambient light goes below the slider setpoint plus a little margin.
⑩	Autoscale display/LED brightness	The autoscale options vary the display and/or LED brightness between the day and night level setting, according to the ambient light level. The averaging time is about 20-30s before brightness is changed. Note that the day and night display/LED brightness settings have to be different in order to see any effect. Default = disabled.

Time, Date and Display Options ➤

Here you can set the date and time, as well as general options including the display format, night-time dimming mode and whether to show the date and/or temperature automatically.

① Use current time and date

② 12 hour time 24 hour time

③ DD/MM/YY MM/DD/YY

④ Celsius Fahrenheit

⑤ Show leading zero

⑥ Beep on button press Loud Quiet

⑦ **Colon mode**


⑧ **Display mode**
 Date and Temp

⑨ **Night-time Detection**

⑩ Autoscale display brightness during day
 Autoscale LED brightness during day

7.3 LEDs and Display Brightness Options


Item	Setting Name	Description
①	Set custom LED colour	Use red, green and blue sliders to adjust custom colour. When clicked, the custom colour is shown for 5 seconds automatically. If you change the sliders, the new custom colour will be saved when you submit the settings. You can choose to show the custom colour in options ③, ④, ⑤.
②	LED colour cycling	Change between a fixed LED colour set in ③, ④, ⑤ or six speeds of RGB colour changing. If colour cycling is enabled, then it over-rides the independent time/date/temperature screen colours and brightness, with the time screen brightness setting being applied to all screens. Default = cycling disabled.
③ ④ ⑤	Time/Date/Temperature screen LED colour and brightness	Select the LED colour and brightness when showing the Time, Date, and Temperature screens. When showing a counter/timer the time screen colour is used. Default = all cyan at max brightness.
⑥	LED dimming in night mode	Select the level of dimming applied for night mode. Options are no dimming, 50%, 15% (default), or LEDs off.
⑦	Set day and night tube brightness	Use the sliders to set the day and night tube brightness. Default levels are 7 (max) for day and 5 for night.

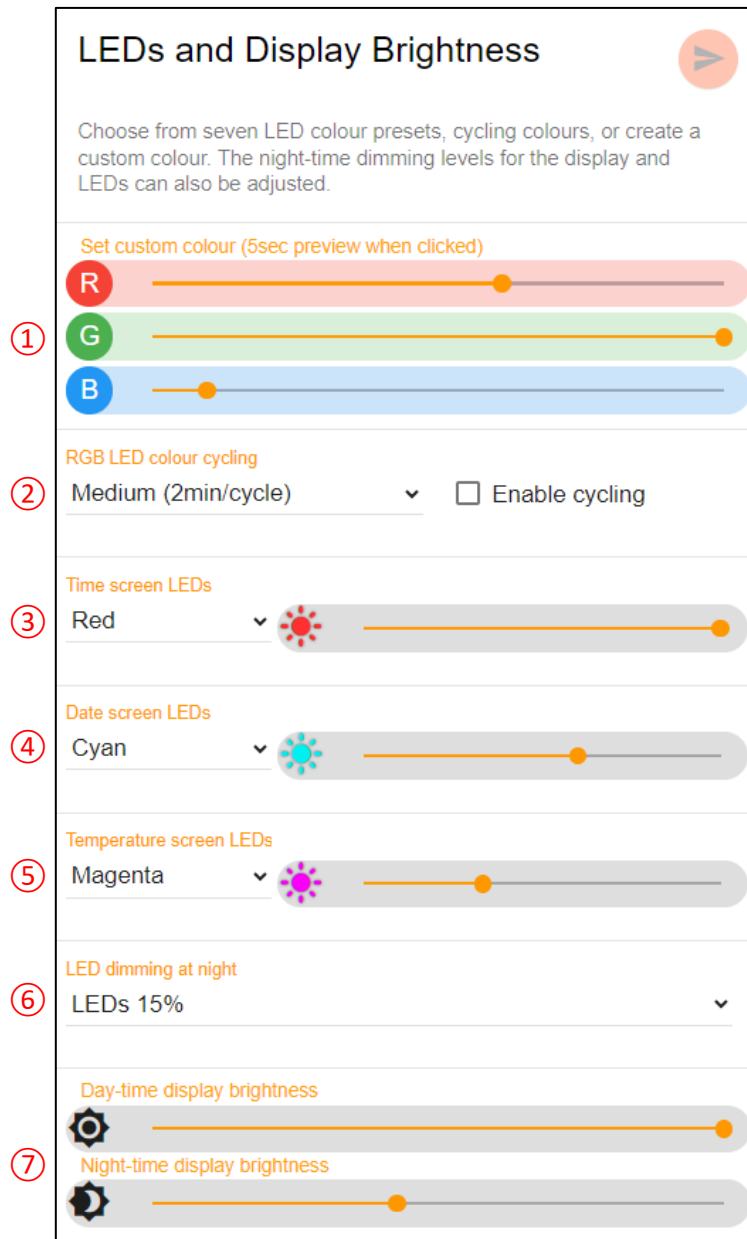

7.4 Anti-Poisoning Options

Tube anti-poisoning is a feature which periodically cycles all tube segments in order to reduce uneven segment wear. You can still use enable the hourly/random-time LED colour changer even if the antipoisoning setting is disabled. If the display is currently turned off due to the On-Off Timer setting, then no antipoisoning or LED cycling will occur, but one may occur when the display wakes. If colour-cycling LEDs are enabled, the LED-After option will be ignored.

Item	Setting Name	Description
①	Enable tube antipoisoning	Choose to enable or disable the tube antipoisoning effect which helps to reduce uneven tube segment wear. If disabled, options ② and ③ will be hidden. Regardless of this control, the LED changer will still work according to settings ⑤ and ⑥. Default = all disabled. Does not function when the display is disabled due to the on-off timer, however an antipoisoning cycle may occur when the display wakes.
②	Antipoisoning pattern	Four styles of antipoisoning routine are available. To try each, set the Occurrence Time ⑤ to "Run immediately".
③	LED cycling during antipoison	Select whether the LEDs should cycle through the colours during the antipoisoning routine.
④	Dimming at night	For best results the tube brightness should be maximum during antipoisoning. This option selects the behaviour during night time – antipoisoning disabled, normal (full) brightness, or dimmed to the night-time tube brightness.
⑤	Occurrence time	Select the occurrence time for the tube antipoisoning and/or LED colour changer. Options are Runs every hour (on the hour), Runs on a random minute each hour, Runs every 10 minutes (on the minute), Runs on a random minute every 10 minutes, or Run immediately until stopped.
⑥	LED after antipoisoning	Select whether the LEDs should change colour after the antipoisoning finishes. Options: No Change, Change to Next Preset, and Change to a Random Colour. If the LED cycler is enabled or the LEDs are off, then this setting has no effect.

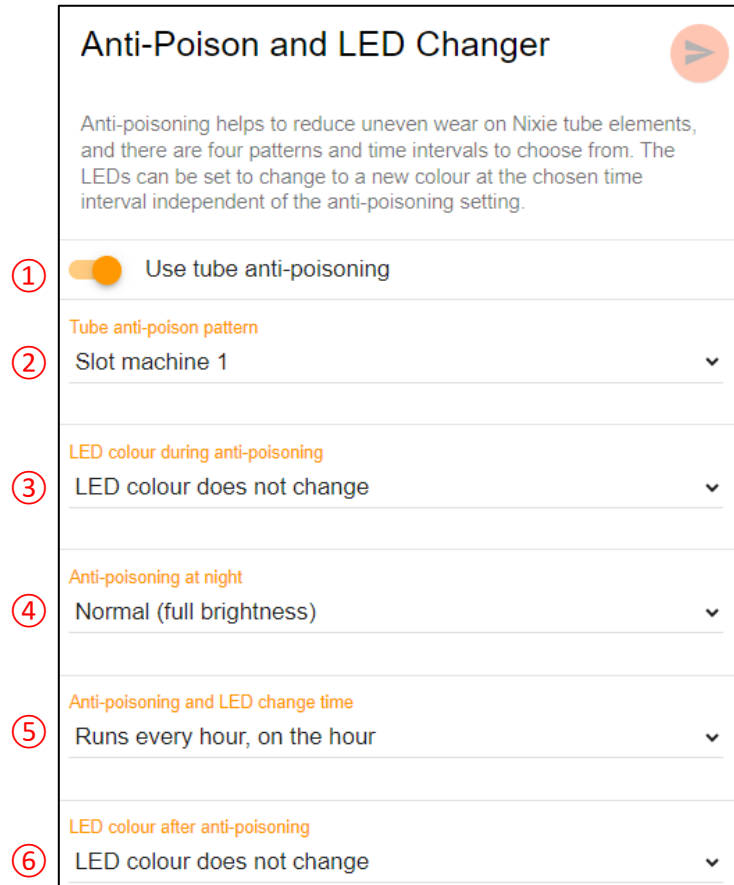

7.5 On-Off Timer

The On-Off timer allows setting of up to two independent on and off times each day, settable in 15-minute increments. When the time reaches the exact minute of the on or off time, the tubes and LEDs will turn on or off respectively. The times do not have to be set in pairs – it is possible to set just a single off time for example. When the clock is off/sleeping, pressing any button will wake it. Utilising the on-off timers can greatly increase tube lifetime and reduce power consumption.

Remember that any time midnight or after is part of the next day's on/off timer. By default, all timers are disabled.

Item	Setting Name	Description
① ②	USB sleep/wake	Sleeps when the clock detects no activity on the computer's USB port, such as when the PC goes to sleep or is shut down. This feature depends on the computer's hardware and may not be compatible for all devices. Default = disabled.
③	Behaviour after power loss	If power is lost whilst the display is off then by default the display will turn on when power is restored. The 'Resume Last State' option however will instead continue to stay off upon power restoration, if it was off before power loss.
④	Day selection	Each day can have up to two on and two off times. Default = all disabled.
⑤	Enable/disable first on/off time	Click to enable/disable the first on-off times in ⑥ and ⑦.
⑥ ⑦	First on/off time	Set the on and/or off time in 15-minute increments. As soon as the clock "rolls over" onto the set time, the tubes and LEDs will turn on or off respectively.
⑧	Enable/disable second on/off time	Click to enable/disable the first on-off times in ⑨ and ⑩.
⑨ ⑩	Second on/off time	Set the on and/or off time in 15-minute increments. As soon as the clock "rolls over" onto the set time, the tubes and LEDs will turn on or off respectively.
⑪	Copy to... button	When on the Sunday tab, this button applies the Sunday on/off times to all days. When on the Monday tab, this button applies the Monday on/off times to all weekdays.

The screenshot shows the 'On/Off Timer' settings interface. At the top, there is a title 'On/Off Timer' and a right-pointing arrow icon. Below the title is a descriptive paragraph: 'To prolong display life and reduce power consumption, up to two on/off times can be set per day. For example, you could set the Monday to Friday off time to be 9AM after leaving for work and the on time to be 4PM for when you arrive home.'

The settings are organized as follows:

- ①** Turn off when PC sleeps
- ②** Turn on when PC starts
- ③** Behaviour after power loss: Always on (dropdown menu)
- ④** Day selection: SUN, MON, TUES, WED, THURS, FRI, SAT (SUN is selected)
- ⑤** Timer A enable:
- ⑥ ⑦** On time A: 07:00 AM (clock icon) | Off time A: 11:30 PM (clock icon)
- ⑧** Timer B enable:
- ⑨ ⑩** On time B: (clock icon) | Off time B: (clock icon)
- ⑪** COPY TO ALL button

8. Maximising Tube Life

Your nixie clock uses authentic soviet-made ИH-12 (IN-12) tubes, which have been obsolete and out of production for many decades. Steady demand and no new manufacturing means replacement tubes are relatively expensive and in limited supply.

The most significant way to ensure long tube life is the use of the built-in On-Off timer. This feature allows the setting of up to two independent on and off times each day of the week, during which the tubes and LEDs are completely off and the clock is in a low-power state. A common use of the on-off timer is to automatically turn off the tubes when its owner is asleep (eg: 11:30PM to 6AM, 7 days a week) and at work (eg: 8AM to 4:30PM, 5 days a week). Using this feature (see [On-Off Timer](#)) will significantly increase tube life, and in the example above, the life would be increased 2.1 times, since the tubes are only on for 48% of the week. When your clock is sleeping, pressing any button will wake it up immediately.

When setting the tube brightness, ensure that the brightness is high enough to keep the digit completely illuminated. It is normal for a tube to a few seconds to become fully illuminated after being switched on from cold, however after that time, all digits should be fully illuminated without any dark spots or flickering. When turned on from cold, the tubes will be lit at full brightness for 10 seconds to help them start up, before returning to your set brightness value.

As the tubes age they may develop dark spots or partial illumination, particularly if used at low brightness for long periods. In this way, using a higher brightness is better. To reduce the formation of dark spots (known as cathode poisoning), use the built-in antipoisoning feature (see [Anti-Poisoning Options](#)), which cycles through all digits at high brightness every 10 or 60 minutes. For the best preventative measure, use the 10 minute option. From the Web App, you can also set the antipoisoning to start and continue until stopped, which can resolve mild cases of cathode poisoning when run for 24-48 hours.

If a tube fails to illuminate at all even when set to max brightness, or if it instead of a digit, it shows a glowing orange cloud, the tube may be defective or damaged. This can occur if the glass tube cracks, so care should always be taken not to exert any force on the tubes, for example, always carry your clock by the base and not the tubes. If a damaged or defective tube is suspected, or for any other assistance, please contact support@nixlabs.com.au. The tubes are socketed and can be replaced by a suitably skilled person – refer to Tube Replacement. NIX labs also offers repair and refurbishment services – please refer to the Warranty and Repairs section for more details.

9. Troubleshooting

Before contacting support, please try the following troubleshooting steps. If problems persist, contact support@nixlabs.com.au.

Symptom	Steps to try in order	How to fix
Tubes are off	Press any button to wake the device from a programmed off-time. If the tubes turn on, then the clock was turned off automatically according to the configured on-off timer	Connect your device to a PC and refer to On-Off Timer to adjust or disable the timer feature.
	Press the ▼ button and observe if LEDs change. If so, the USB voltage is too low to light the tubes.	Ensure that you are using the supplied USB power adaptor. Replacements can be ordered from NIX labs.
	Unplug clock, wait a few seconds, and re-connect.	If the problem occurs frequently, contact NIX labs. You can force a reset by pressing the gold button under the clock with a bent paperclip (this clears time and settings).
	Ensure USB connector is firmly attached, that you are using the supplied power adaptor and the outlet is working. If still inoperable, try a different USB charger such as those supplied with mobile phones.	If operation is normal with an alternate power adaptor, then order a replacement adaptor from NIX labs.
Tubes are dim	Refer to Parameters Settings Menu or Using the Web App to set the tube brightness level and night-detection threshold.	Try changing both day and night tube brightness levels. If the clock is using the night brightness value, refer to Parameters Settings Menu (or Using the Web App) to set the night-detection threshold.
	Ensure you are using the supplied power adaptor and that it is firmly attached, as brightness is automatically reduced if the USB voltage drops too low.	Ensure you are using the supplied USB power adaptor. Replacements can be ordered from NIX labs.
Tube(s) not showing a digit	Gently adjust the position of the tube in its socket. If the problem persists, remove the tube and adjust the socket contacts according to Tube Replacement.	Bad connection from the tube to the socket - refer to Tube Replacement.
Tube showing only some digits and digits upside-down.	Remove tube and re-install according to Tube Replacement.	Tube may be installed upside-down - refer to Tube Replacement.
Display is flashing on and off	Ensure you are using the supplied power adaptor and that it is firmly attached. If powered from a computer, do not use unpowered USB hubs or extension cables.	Ensure you are using the supplied USB power adaptor. Replacements can be ordered from NIX labs. If powered from a computer, avoid unpowered USB hubs.
Digit is not fully lit, flickering or has dark spots.	As the nixie tubes age, they may flicker or partially-light if the brightness is set too low. Dark spots can be caused by “cathode poisoning” which can be reduced by using the anti-poisoning feature. If the tube appears completely “off” it may have become damaged (eg: crack in the glass).	Refer to Parameters Settings Menu or Using the Web App to increase the tube brightness. You can force the anti-poisoning sequence by using the Web App. Also see Maximising Tube Life.

Display and LEDs are brighter than set level	<p>Power supply voltage is too high. Ensure you are using an appropriate power adaptor. If powered from a computer, try a different port or USB hub.</p>	<p>Ensure you are using the supplied power adaptor. If powered from a computer, try a different port or USB hub.</p>
Cannot connect via USB	<p>Unplug clock, wait a few seconds, and re-connect, making sure USB connector is firmly attached. Ensure the USB cable is working by trying in another device such as a mobile phone or camera. Do not use charge-only USB cables.</p>	<p>Replacement cables can be ordered from NIX labs.</p>
LEDs Change Colour Randomly	<p>Use Web App to check if the hourly or random-minute LED changer is enabled. The Web App also allows setting of the LEDs to different colours depending on whether the Time, Date or Temperature screen is being shown.</p>	<p>Adjust settings as desired Using the Web App.</p>
Other unexpected behaviour	<p>Unplug clock, wait a few seconds, and re-connect.</p> <hr/> <p>Perform a firmware upgrade by selecting “Firmware Update” from the “More Options” icon in the Web App. Refer to Using the Web App.</p> <hr/> <p>Unplug clock and force a reset by pressing the gold button under the clock with a bent paperclip. This will clear the time and settings.</p>	<p>If the problem occurs frequently, take note of what seems to trigger the fault, and contact NIX labs for support.</p>

10. Firmware Upgrade

Your NIX labs clock can be upgraded to the latest firmware version in less than one minute using the online Web App. Click the gear icon and select Firmware Update from the menu. From here you can see the changes and new features in the latest version, and start the upgrade if desired. When you click the upgrade button your clock will disconnect then reconnect in bootloader mode – you will have to select it again from the connection list popup. The display will turn off during the upgrade and a single LED will be lit to show the status – this is referred to as Bootloader Mode (refer to below table). The time/date and all of your settings are preserved during the update, which usually takes 30 seconds.

LED Colour	Meaning
Red	Device is in bootloader mode, but no PC is connected
Yellow	Device is in bootloader mode and connected to the PC
Purple	Firmware download in progress
Green	Upgrade completed (see note below)

Note: during a successful firmware upgrade, the green LED will flash only very briefly. If the green LED stays lit, but the tubes do not glow, then the firmware upgrade was corrupted. In this case, follow the steps below to manually enter the bootloader and try the firmware upgrade again.

If the firmware has become corrupt or behaviour is erratic, you can manually enter the bootloader and still connect to the Web App to do a firmware upgrade. To do this, unplug the clock then hold down all three buttons whilst plugging back in. A single LED should now be shown according to the table above. To exit the bootloader mode, simply disconnect then reconnect the USB cable.

11. Cleaning and Maintenance

If your device become dusty, unplug it and wipe with a clean, lightly dampened cloth. Do not use solvents on the case as they may cause damage. If insects or dust gets into your clock, unplug it and use a can of compressed air / air duster (available at computer stores) to blow out the material via the gaps around the tubes and on the underside. Never insert metallic objects into the circuit board area, as high voltages are present when operating, and even when unplugged, the clock is still running to keep accurate time. Take care when handling since a crack in the glass can cause the tube to fail completely.

There are no single-use fuses on the circuit board, nor any batteries. Apart from general cleaning, no maintenance or periodic servicing is required.

12. Tube Replacement

The tubes used in the NIX4F are socketed and replacement may be performed by skilled and suitably experienced persons. If you have any doubts as to your ability to safely and correctly replace the tubes, then please contact NIX labs for support or to discuss our repair and refurbishment services.

Warning: The tubes must only ever be removed when the power is turned off due to a risk of electric shock. Wear protective gloves when removing a tube with cracked or broken glass.

The tube replacement procedure is as follows:

1. Obtain the replacement tube(s): both IN-12A and IN-12B types are supported.
2. Unplug your NIX4F from power and position it on a suitably tidy and safe work surface.
3. If the faulty tube is cracked or broken, wear appropriate PPE (eg: gloves).
4. Grasp the top and bottom of the tube and gently pull out of the socket. Gentle wiggling may help.
5. Install the replacement tube in the correct orientation (the PCB is marked "TOP" and also with an arrow that matches the arrow moulded in the glass of most IN-12 tubes. Gently push the tube all the way into the socket.
6. Plug in your NIX4F and verify that all the digits light up correctly.

When unplugged for 20 minutes or more, the display will automatically show the antipoisoning startup pattern which you can use to check the digits. Otherwise, you can show this pattern manually by choosing the "Run immediately until stopped" setting in the Anti-Poisoning Options tile of the web app (see [Anti-Poisoning Options](#)).

If one or two digits fail to glow, the tube socket may not be making good contact, which can be caused after many tube replacements or if a lot of wiggling was used during tube removal. Often a gentle re-adjustment of the tube can fix this, but if not then the tube socket contacts may require some adjustment. To do this, unplug your NIX4F, remove the tube again, then also pull off the black socket base. Now use tweezers to close up the metal contacts for a tighter fit, then re-install the tube and test.

13. Wall Mounting

Your NIX4F has two rear screw slots for wall mounting if desired and a wall mount kit is available (see Powering Up) for convenience, although it is not required. **Warning:** Mount your NIX4F securely using appropriately rated hardware. Do not position it where it could be knocked off or pulled off by its cable (for example by children or pets) because if it falls the tubes may break open and expose high voltage circuitry. If the product becomes damaged and a potential hazard arises, unplug the product from mains power immediately and contact NIX labs for support.

The wall-mounting procedure is as follows:

1. (Optional) Insert the USB-C right angle adapter to allow the power cable to be hidden under the NIX4F case.
2. (Optional) Stick on the rubber feet to the case rear if desired.
3. Use the paper template to mark the two screw locations on the wall.
4. Install the appropriate wall anchor hardware, with each device rated to hold at least 5kg. For example plasterboard or masonry will require wall anchors whereas solid wood does not need additional hardware.
5. Screw in the two screws until the top of the screw head aligns with the dimension below (also marked on the template). You may need to adjust this protrusion length and/or push the screws laterally slightly in order to get a secure fit.
6. Plug in your NIX4F and slide onto the screw heads. Check that both sides are secure by gently pulling.

NIX4F drawing, viewing the back. All dimensions in mm, 1:1 scale – verify scale after printing.


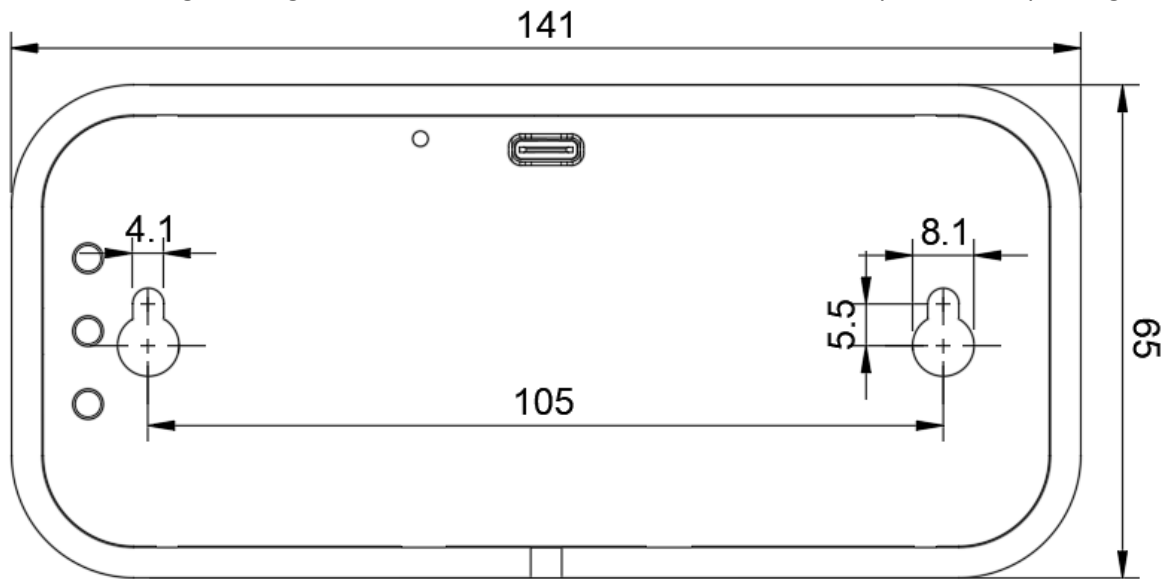


Diagram of screw protrusion from wall. All dimensions in mm, 1:1 scale – verify scale after printing.

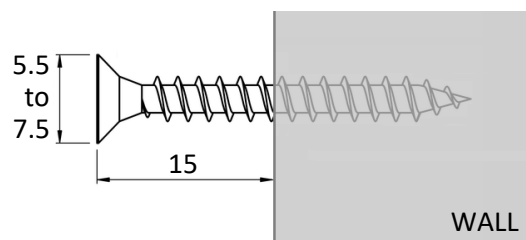

14. Warranty and Repairs

All NIX labs products come standard with a back-to-base three year warranty (including the original tubes), in addition to your rights under the Australian Consumer Law or other relevant local regulations. Repair and refurbishment services are also offered for products outside of warranty. If the product becomes damaged and a potential hazard arises (for example, damage to the case or tubes that exposes circuitry), unplug the product from mains power immediately and contact NIX labs for support.

“Back-to-base” warranty means that the customer arranges for shipment back to NIX labs, and provided the warranty claim is valid, NIX labs arranges shipment back to the customer. As a first step, please see the Troubleshooting section. For all servicing and support needs, please contact NIX labs: support@nixlabs.com.au. We recommend keeping the product packaging for safe storage or if you need to send it back to NIX labs.

14.1 Australian Consumer Law

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

14.2 Warranty and Liability Disclaimer

This limited warranty covers defects in workmanship and materials for a period of three years from date of purchase. During the warranty period, NIX labs will replace or repair, at its sole option, any defective NIX labs product returned to us. This warranty explicitly excludes products for which NIX labs has not received payment.




This warranty does not cover problems that result from abuse, accident, misuse, or problems with electrical power. It does not cover uses not in accordance with the instruction manual. It does not cover commercial use of the product, nor does it cover situations where the product was used in harsh environments including but not limited to, moving vehicles, in wet or moist areas, outdoor use, or in locations where elevated levels of sulphur, chlorine or other corrosive gasses are present.

To the maximum extent permitted by law, all express and implied warranties, including, but not limited to, any implied warranties and warranties of merchantability or fitness for a particular purpose are disclaimed. NIX labs does not accept liability for incidental or consequential damages, or for any third-party claims for damages caused by use of the product. Through your continued use of the product, you agree to the terms of service made available at nixlabs.com.au/terms-of-service.

NIX labs makes every effort to ensure the information provided herein is accurate and complete, however, NIX labs does not guarantee the accuracy, reliability, or completeness of the information, including product specifications and characteristics. This information may change at any time. The availability and performance of NIX labs online services, including the web site (www.nixlabs.com.au) and the web app (app.nixie.com.au) is not guaranteed.

15. Specifications

NIX labs products are proudly designed and made in Brisbane, Australia using globally-sourced components.

	<p>As these devices are manufactured using a leaded (Pb) process they must not be disposed of in regular garbage. Contact your local council for leaded e-waste disposal, or contact NIX labs to arrange for recycling free-of-charge.</p>
	<p>The material make-up of this device is acrylic (case), wood (case), fiberglass (PCB), glass (tubes) and metals including lead (components). This product does not contain a lithium battery.</p>
	<p>The power adaptor supplied with this product is a commercial 3rd party product which has been subjected to independent safety testing and regulatory approval, including the requirements of the Australian regulatory compliance mark, RCM (pictured). NIX labs products have been assessed against relevant electromagnetic compatibility and safety standards. For compliant, reliable and safe operation, only use the power adaptor supplied.</p>

NIX4F	
Dimensions:	141mm x 59mm x 65mm (LxWxH)
Weight:	175g
Operating Environment:	0°C to +40°C, ≤95%rh non-condensing. Keep dry.
Display Type:	HH:MM, each digit is a reclaimed IN12 nixie tube. 2 neon bulbs for the colon separator.
LED Tube-Lighting:	7 presets with 32,768-colour custom setting and cycling mode
Time Accuracy:	Calibrated to < 0.0003% (3ppm) with digital temperature compensation. < 8sec/month @ 25°C
Temperature Accuracy:	0.1°C Resolution, ±3°C Accuracy (typ <1.5°C)
Time + Settings Backup:	Supercapacitor backup maintains time and date: 5 days min, 5-7days typical. User settings are saved permanently.
Supplied Power Adaptor:	Input voltage: 100-240VAC 50/60Hz Output: 5.1V at 1A typical, 5.3V max. RCM Compliant
Supply Voltage/Current:	4.8V – 5.3V via standard USB-C reversable socket. Power supply current rating should be ≥1.0A
Supply Current (5.0V)	
Display Disabled:	30mA (0.15W)
Minimum Brightness:	100mA (0.5W)
Maximum Brightness:	260mA (1.3W)
Add for LEDs:	+20mA (+0.1W)
Web App Compatibility:	WebUSB Application on Google Chrome v61, Microsoft Edge v79, Opera v48 or newer, running on Windows, Mac, Linux, ChromeOS and Android.
USB Driver Details:	VID: 0x04D8, PID: 0xEEAD. Driver base: WINUSB.

15.1 Dimensions

